

WELDING PROCE SERVICE PROCESSERVICE BULLETINES



Welding procedures for Motor Vehicles

December 15, 1986

Before beginning welding operations on any motor vehicle, there are two very important steps to consider:

1. Disconnect the battery from the vehicle's electrical system:

This will reduce the possibility of damage to the electrical system (battery, wiring, diodes, etc.) due to arcing or welding current flow through the wiring. (See *FIGURE 1*.)


2. Location of the ground clamp:

The ground clamp should always be located to provide the smallest current path loop between the welder and the work. Particular care should be exercised when welding near bearings, springs, or plastic components. Bearings can be damaged by arcing when the current path goes through the bearing; and plastic components can be damaged when a poor ground or welding arc produces excessive heat.

EXAMPLE: Landing Gear Installation — When welding brace ears on trailer landing gear:


- **A. DO NOT** locate the ground clamp on the landing gear foot. This location would cause the welding current to pass through the thrust bearing, resulting in potential arcing and damage to the bearing.
- **B. DO NOT** locate the ground on either the crank or cross shaft. This location would cause the current loop to pass through the gears which will not provide an adequate ground. This will lead to excessive heat. (See **FIGURE 2**.)

The ground should be located either on a mounting bolt or on the trailer frame. (See *FIGURE 3*.)

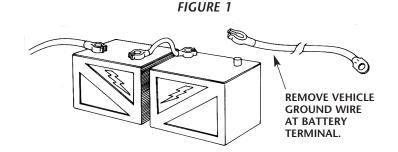

INCORRECT GROUND



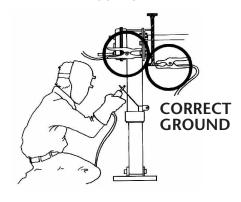

XL-SB014

1

Copyright © November 2002 • The Holland Group, Inc.

Holland USA, Inc. Facilities: Denmark, SC Dumas, AR Holland, MI Muskegon, MI Warrenton, MO Wylie, TX Ph: 888-396-6501 Fax: 800-356-3929 Holland International, Inc. Holland, MI 616-396-6501 616-396-1511 Phone:

Fax:

Holland Hitch of Canada, Ltd. Woodstock, Ontario • Canada 519-537-3494 800-565-7753 Phone: Fax:

Holland Equipment, Ltd. Norwich, Ontario • Canada 519-863-3414 519-863-2398 Phone: Fax:

Holland Hitch Western, Ltd. Surrey, British Columbia • Canada Phone: 604-574-7491 Fax: 604-574-0244